

Thank you for purchasing the Zeeland lounge sofa.

This manual explains step by step how to assemble the bench.



4x 168



1x 168x12,5



1x 168x5,6 cm



2x 71,5 cm



5x 51x2,7 cm



4x 46,5 cm



2x 36x5,6 cm



3x 32 x2,7 cm



2x 22,4x5,6



2x 20,6x5,6

What do you need?

- Battery toll
- Tape measure
- Scissors
- Pencil
- Sandpaper
- The supplied screws
- Pre-drill attachment (we recommend drill size 4)

Step 1: Sanding

Use sandpaper for this (we recommend p100 sandpaper). Sand the edges of the boards so that there are no irregularities in the edges of the boards.


Step 2: side panels.

You will need the following planks / battens:

- 2x 71.5 cm
- 4x 46.5 cm
- 2x 51x2.7 cm

Lay out 1 plank of 71.5 and 2 times 46.5 cm. It is important that the annual rings of the shelf point downwards. Do this 2 times. Now take the 51x2.7 cm slat and for it in 6 places at the front and screw the crossbar to the boards.

Now take another strip of 51x2.7 cm and place it at a height of 32 cm from the planks, pre-drill and screw it on.

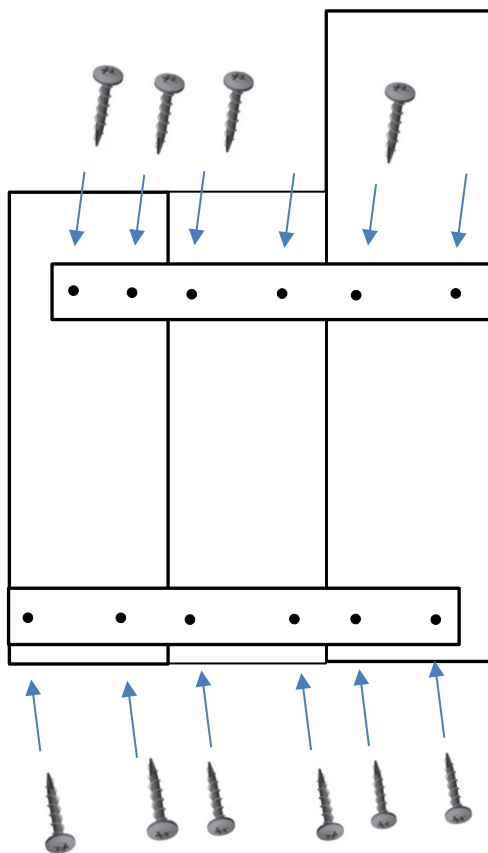

Interior side view

Step 3: the seating

You will need these boards / slats:


- 3x 168 cm
- 1x168x5.6
- 1x 51x2.7 cm

Now the seat is mounted. Take 3 168 cm planks and pre-drill them. Now the three 168 cm planks can be bolted to the inside of the side panels on the top crossmember.

Then take the 51x2.7 cm slat and pre-drill and screw it into the center of the 168 cm planks. Screw it under the bench.

Now take the finishing strip that is intended for the front of the bench, pre-drill it in 3 places, namely left, middle and right. Now screw it on.

Screw everything in through the top.

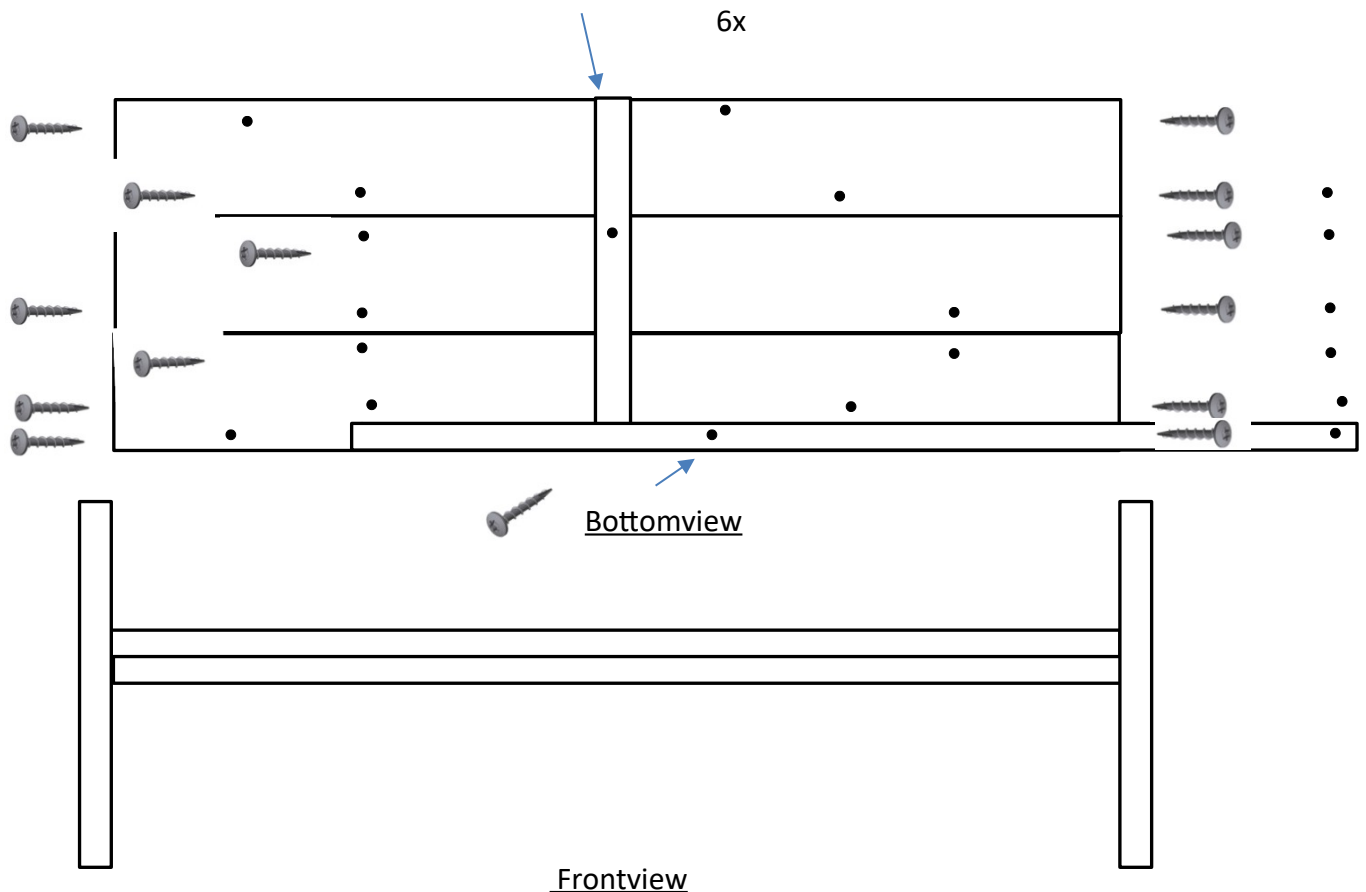

Step 4: the railings.


You will need these boards / slats:

- 2x 20.6 x 5.6 cm
- 2x 22.4 x 5.6 cm
- 2x 36 x 5.6 cm

Take the planks 20.6x5.6, 22.4x5.6 and 36x5.6 cm. These serve as a handrail. Pre-drill these boards. Start with the bottom railing, that's what the 36 cm board is for. Pre-drill it in 2 places and screw it on.

Now take the board of 22.4, which serves for the vertical part of the railings. Pre-drill and screw in 2 places.

Now the top of the handrail, that's what the 20.6 board is for. Pre-drill these in 3 places. The side with two holes pre-drilled goes into the vertical railing. screw it on now.

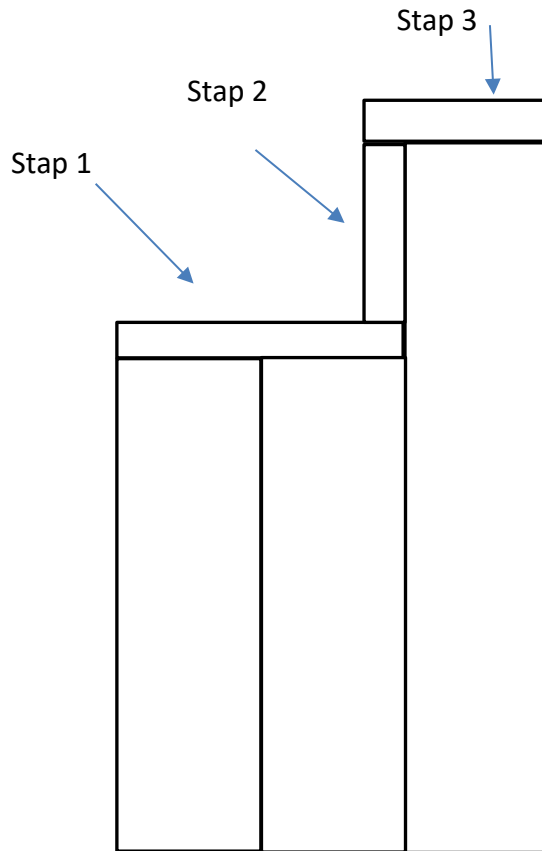

Side view of the side panel..

Step 5: The backrest.

You will need these boards / slats:

- 2x 168 cm


- 1x168x5.6

- 3x 32x2.7 cm


Take the 2 planks of 168 cm, these will form the backrest. Place these boards side by side. Now take a slat of 32x2.7 cm and pre-drill it in 4 places and then screw it to the 2 boards. Do the same with the other 2 slats, so you have one on the left, one in the middle and one on the right.

Then you screw 3 screws on the inside of the 2 outer slats, which ensure that you can attach the backrest to the sofa.

If the 2 shelves of 168 are one piece, place them right side up on the seating area. Make sure that the backrest is 43 cm from the front. Now screw the backrest to the side panels.

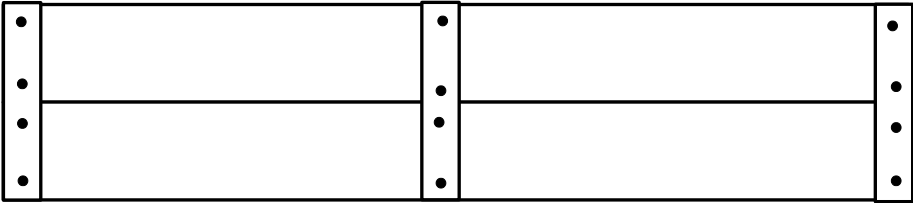

Rear view

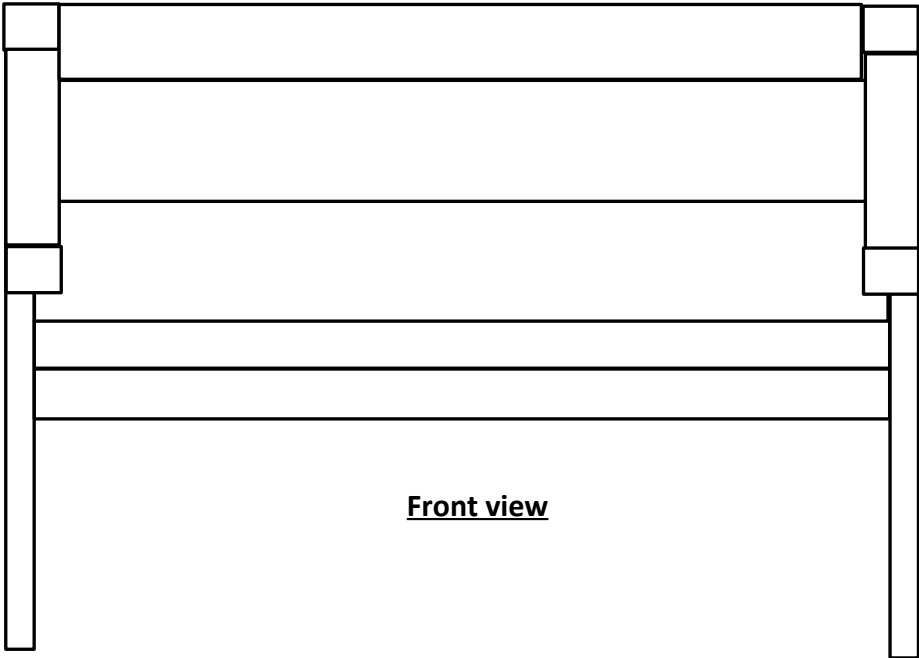

Front view

You just finished the assembly, enjoy!